

Tools and accessories for crimp contacts

for contacts of inserts series:

page:

CD	(10A)	66 - 74
CDD	(10A)	76 - 83
CDC	(16A)	104 - 106
CCE	(16A)	130 - 135
CQE	(16A)	168 - 173
CQEE	(16A)	176 - 177
CMCE	(16A)	137 - 145
CQ	(10A/16A)	186 - 193
CX 8/24	(16A/10A)	194
CX 6/36	(40A/10A)	198
CX 12/2	(40A/10A)	199
CX 6/6 *	(16A)	206
MIXO	(40A/16A/10A)	267 - 306

* the underlined polarities indicate those contacts that require the tools shown in this page

manual crimping tool gauge



insertion tool - removal tools replacement tip



description

part No.

part No.

crimping tool for **10A, 16A and 40A** contacts
RENNSTEIG model (turret included)

CCPZ RN

"go / no go" control gauge
to verify indenter closure (see note)

CCPNP RN

insertion tool

for insertion of the contacts into the inserts
for crimped contacts up to 0,75 mm²

CCINA

removal tools

for the extraction of contacts from the inserts

for **10A** contacts ¹⁾for **16A** contacts ²⁾for **40A** contacts ³⁾ and cables Ø < 5 mmfor **40A** contacts ⁴⁾ and cables Ø < 7,5 mm

CCES
CQES
CXES
CXES-10

replacement tip

for CCES removal tool

CCPR RN

¹⁾ for CQ, CD, CDD, CX inserts (10A auxiliary contacts) and MIXO module (10A)

²⁾ for CQ, CQE, CQEE, CCE, CMCE inserts (excluded 16+2), MIXO module (16A), CX6/6 (16A) and CDC. For CMCE (16+2), CX inserts (contacts 16A insert CX 8/24) using a flat 3 mm screwdriver.

³⁾ for CX inserts (40A contacts) and MIXO module (40A)


⁴⁾ for MIXO module CX 03 4B and contacts 10 mm².

Notes:


"go / no go" control gauge

- A tool used to periodically check that the crimping tool meets standard requirements.


CCPNP RN

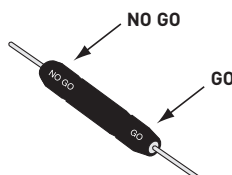


CCPZ RN

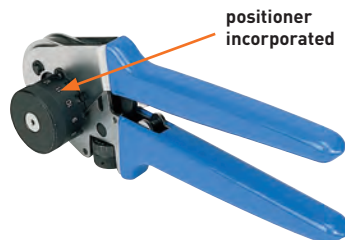


CCINA

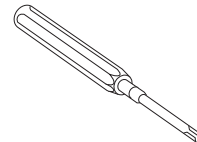


CCES

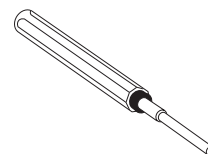


CCPR RN



CQES

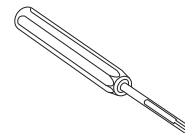

CXES-10

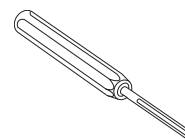

Watch
our
online
tutorial